

## Door Locks

### ■ Locking the vehicle from inside



#### ► Inside lock button

- 1 Locks
- 2 Unlocks



#### ► Door lock switch


Operates all door locks.

- 1 Locks
- 2 Unlocks

### ■ Locking the vehicle from outside

Using the entry function or wireless remote control (→P.8, 9)

### ■ Rear door child-protector lock

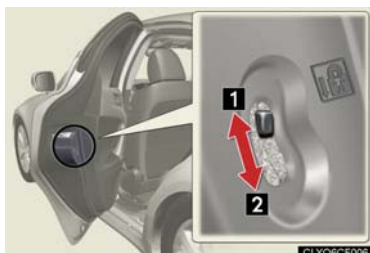

Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

- 1 Unlock
- 2 Lock

Always set the child protector locks when children are seated in the rear seat.

## Power Windows



### 1 Power window switches

**To open:** press the switch.

**To close:** pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of passenger window switches.

## Moon Roof (If Equipped)

### Opening and closing

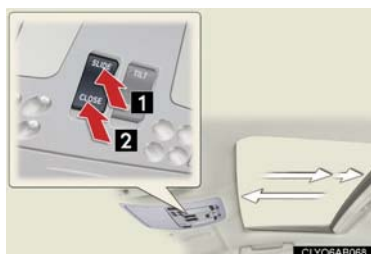


### 1 Open

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

### 2 Close

### Tilt up and down

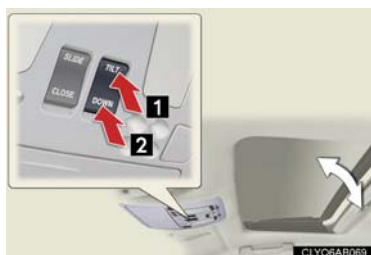

### 1 Tilt up

### 2 Tilt down

## Fuel Tank Cap



- 1 Press the fuel filler door opener.




- 2 Slowly remove the cap by turning it counter-clockwise.  
After the cap is removed, it can be hung on the inside of the fuel filler door.

## Trunk

### Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

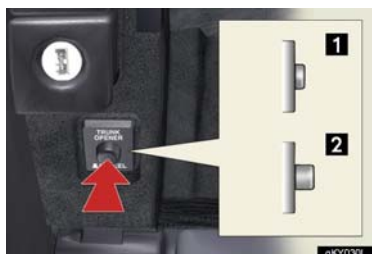

To disable the trunk opener, turn off the main switch in the glove box.

**1** On

**2** Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

### Entry function and wireless remote control

→P.8, 9